CE Declaration of Conformity	
------------------------------	--

Manufacturer	Salter Brecknell
Туре	MS-20

Corresponds to the requirements of the following EC directives

Electro Magnetic Compatibility Directive	EMC 89/336/EEC
Low Voltage Directive	LVD 73/23/EEC
The application harmonised standards are:	EN60950, EN50081-1 EN50082-1

A copy of the original signed declaration for this instrument is available from the below UK address:

#### **Electromagnetic Compatibility Statement for North America**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

Re-orient or relocate the receiving antenna.

Increase the separation between the equipment and the receiver.

Connect the equipment to an outlet different from that to which the receiver is connected.

Consult the dealer or an experienced radio / TV technician for help.

## Salter Brecknell Weighing Products USA

1000 Armstrong Drive, Fairmont, MN56031 Toll Free: 800-637-0529 Phone: 507-238-8702 Fax: 507-238-8271 Email: sales@salterbrecknell.com www.salterbrecknell.com

#### Salter Brecknell Weighing UK & Europe PO box 9533, Smethwick, West Midlands, B66 2TE

Viest Midlands, B66 21E United Kingdom Tel: +44 (0) 870 444 6132 Fax: +44 (0) 870 010 2241 Email: sales @salterbrecknell.co.uk





# **USER MANUAL**

Model MS-20

#### • SETTING UP YOUR MS-20 SCALE

To insure that your scale operates correctly, position the scale on a level sturdy worktop.

The display head can be either attached to the wall or positioned in front of the scale.

Pull down feet on back of display head enable the operator to change the viewing angle of the display head.

Any excess cable can be stored in the cavity on the underside of the display head.

#### POWER SUPPLY

The MS-20 uses 9V alkaline battery or 9V 100mA AC adapter.

**CAUTION:** always connect the AC adapter to the MS-20 before connecting to the mains power supply.

Disconnect from the mains power supply before disconnecting the adapter from the MS-20

#### • KEY FUNCTION



- **ON/TARE** (1) Press once to switch scale on. **OFF -**
  - (2) Press while scale is switched on to re-zero the scale.
  - (3) Press and hold this key for 2 seconds to switch scale off. Scale will auto shut-off if not used after 120 seconds

**UNIT** - Selects between kg mode and lb mode.

**HOLD** - When pressed the displayed weight will be held on the display once the weight becomes stable.

By repressing the Hold key again will release the held display and allow the scale to return back to normal weighing mode.

#### CALIBRATION PROCEDURE

- 1) With the scale switched off, press and hold the "ON/OFF/TARE key, without releasing press the kg/lb key three times and then release.
- 2) Display will show zero  $(500 \sim 4000)$ .
- 3) Press "ON/OFF/TARE" key once.
- 4) Display will show "CAL" and then "0".
- 5) Load 20kg weight onto the scale.
- 6) Display will show span count (1250 ~ 3750)
- 7) Press "ON/OFF/TARE" key again.
- 8) Display will show "CAL" and then "20.00kg".
- 9) Remove the weight from the scale and the calibration is finished

#### • ERROR MESSAGES

 1. Low Battery
 LO

 2. High zero counts
 Err

 3. Low zero count
 ErrL

 4. Overload
 Err

### • SPECIFICATIONS

Model #	MS-20
Maximum Capacity	44 lb / 20 kg
Readability	½ oz / 10 g
Weight units	lb / kg
Power supply	9V alkaline battery or 9V 100mA AC adapter
Dimensions	20" x 12" x 2 ½" / 505mm x 300mm x 65 mm
Display	1.0" LCD display with 4 active digits
Tray	Plastic top cover
Operating Temperature	5°C ~ 35°C
Function keys	ON/TARE/OFF, UNIT, HOLD